



INSTRUCTIONS FOR INSTALLING THE WALLPAPER

The wall surface must be dry and free of dust.

You will receive the wallpaper in rolls, each roll has its own serial number.

Stick the first wallpaper to the beginning of the wall so that it is aligned with the pre-drawn lines on the wall.

Stick the wallpaper gradually from top to bottom.

Remove any air bubbles by squeezing them against the edges.


Wallpaper rolls need to be carefully joined so that they overlap by 1 cm.

After installing all the rolls, ie the entire wallpaper, it is necessary to remove the excess of the wallpaper.


The overlaps between the rolls can be removed if desired.

IMPORTANT: we are not responsible for errors during the installation of the wallpaper!

ORDERED VISUAL

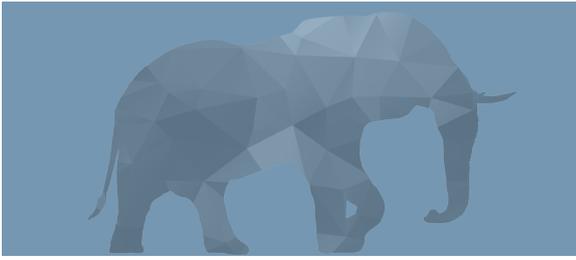


RECEIVED WALLPAPER IN ROLLS

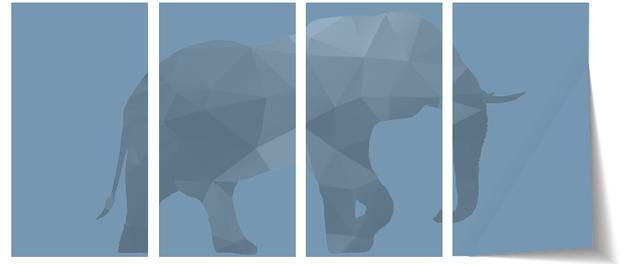

① ② ③ ④

* the number of rolls depends on the size of the wallpaper, the width of the roll is from 1 to 1.25 m

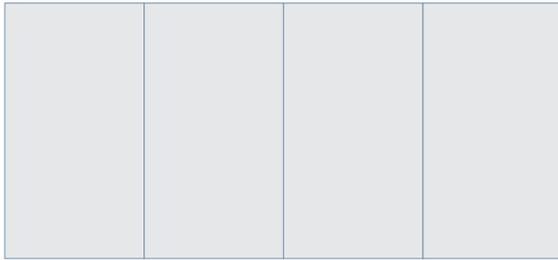


to make it easier to stick the wallpaper, our recommendation is to draw straight lines on the wall of the width of the roll of wallpaper




stick the first roll of wallpaper



the rolls of the wallpaper are stuck on top of each other, where you cover the first one 1 cm wide

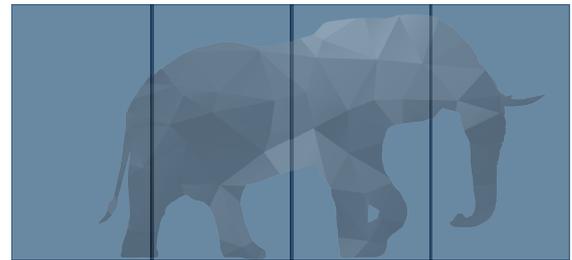


visible passages (1 cm) can be removed if desired by cutting them with a scalpel and ruler

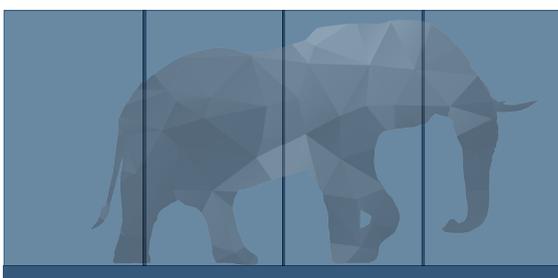

due to uneven walls and the possibility of measurement errors, each wallpaper is 10 cm larger than the dimension you ordered

* once you have stuck the wallpaper to the wall, the mentioned excess should be removed with a scalpel

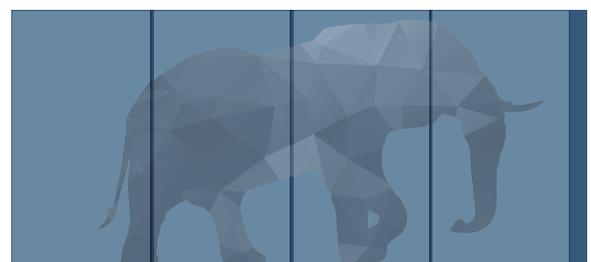

Due to safety and the possibility of measurement errors, each wallpaper is 10 cm larger than the dimension you ordered

* once you have stuck the wallpaper to the wall, the mentioned excess should be removed with a scalpel

[VIDEO LINK INSTRUCTIONS FOR INSTALLING THE WALLPAPER](#)